 
 


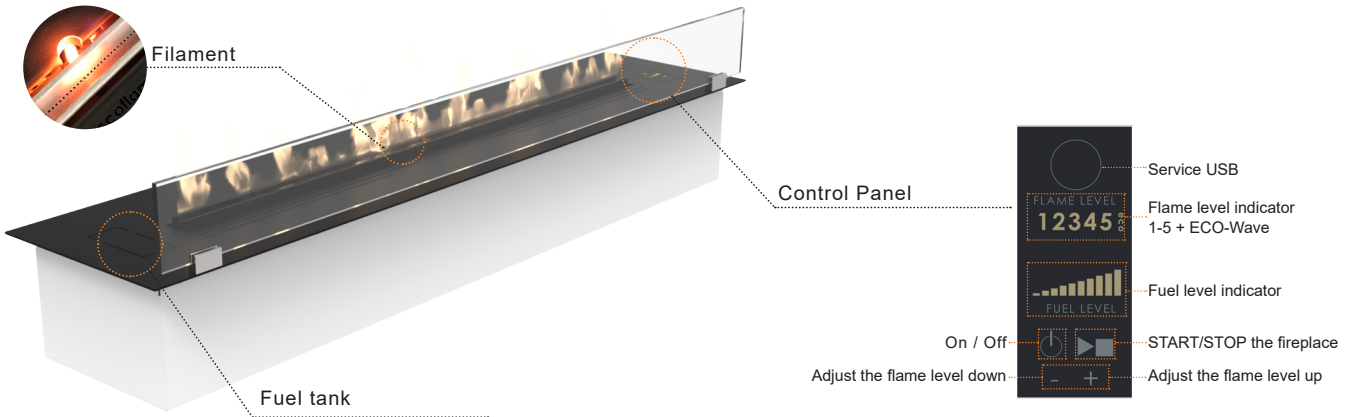

DENVER E-RIBBON BASIC BURNER



Operating:

Step 1	Turn on the electronics of your Denver e-Ribbon Basic™ by pressing the  button.
Step 2	Fill in the right amount of bioethanol in the fuel tank by verifying the level on the fuel level indicator.
Step 3	To ignite the fireplace: Press the  button on the control panel. After about 3 minutes, the first flames will appear around the centre of the flame tray.
Step 4	When the filament no longer is red/glows (approx. 10 min) it is possible to adjust the flames.
Step 5	To switch off the fire at any time – also during the warming-up phase – press the  button on the control panel. The flames will disappear within few minutes.



Use the supplied remote control or download the DecoFlame App to your mobile device for controlling the biofireplace.

Installation of DecoFlame App to the Denver e-Ribbon Basic burner



 
App Store



Google play




Model: Denver Basic 720 - black
 Dimensions: 720x215x125mm - Flame Tray 500
 Power Supply: 220/240V - 50Hz must be earthed
 Serial Number: 7200005.16.V1.001
 Thermal Output: max 2.9 kW
 Fuel Type: bioethanol 96%
 Room Volume: min. 58 m³
 Radio Frequency: 433.92 MHz
 Bluetooth Code: 0001
 Manufacturer: DecoFlame ApS - Made in Denmark

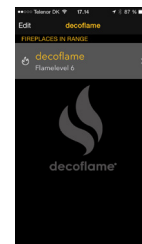


1. Download and install the DecoFlame App by scanning the QR code above corresponding to your smart device's operating system.

2. In order to pair your fireplace with your smart device, start the fireplace by pressing the 'ON' button.
 Start the App and choose your fireplace.
 Insert the code from YOUR rating plate, like the one highlighted above.

 
3. Once your device is paired, the fireplace should be visible on the app.
 You are now able to change the name of the fireplace.

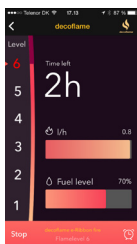

 4. Once you have selected your fireplace, you can turn it on by pressing 'START'.
 If the fireplace has already been turned on using the control panel, you can now monitor the fuel level and the consumption.

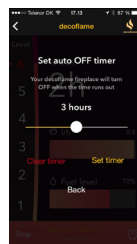

 5. For the 'Turn Off Timer' press the clock icon in the lower right corner. To adjust the remaining time, slide the dot to the left and right and select 'SET TIMER'.
 The remaining burning time can be changed by repeating the above mentioned steps. To cancel the timer select 'CLEAR TIMER'.

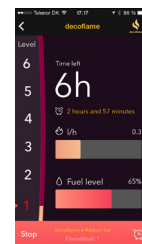

6. For adjusting the flame intensity, select the desired level on the left side of the screen. (1-lowest and depending on model 5-highest + Eco-Wave or 6-highest). Should there not be enough fuel for the selected burning time - the fireplace will shut down automatically. Select 'STOP' to turn off the fireplace.